


ASSEMBLY INSTRUCTIONS

36 INCH CABINET


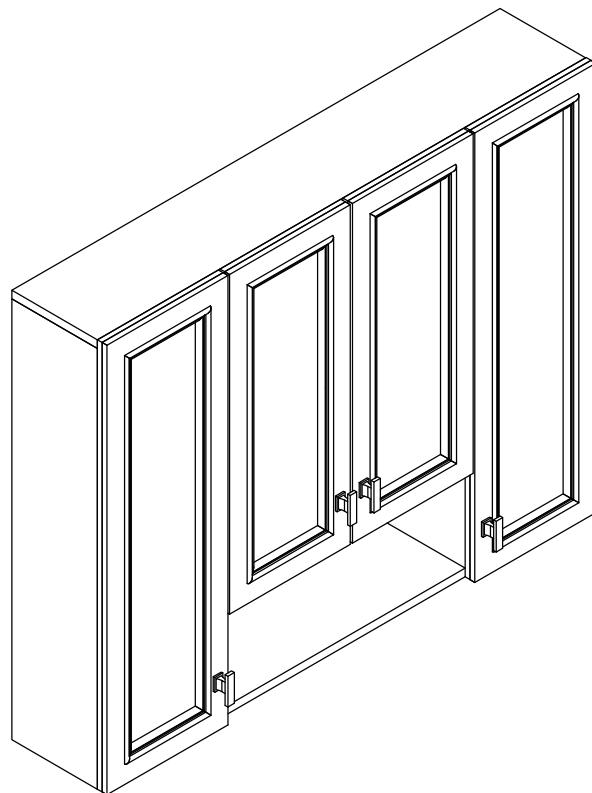


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


!
* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

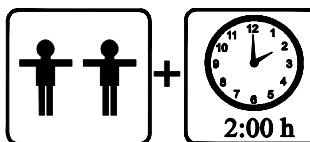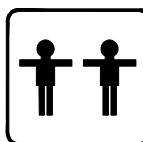

Tools Required

 

(Not included)

 


(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

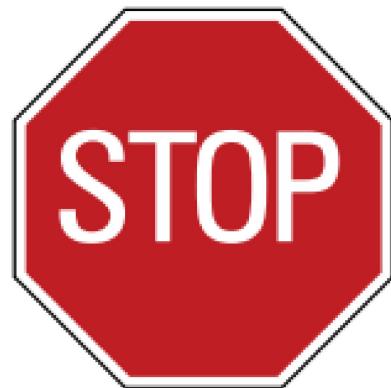

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation


Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions







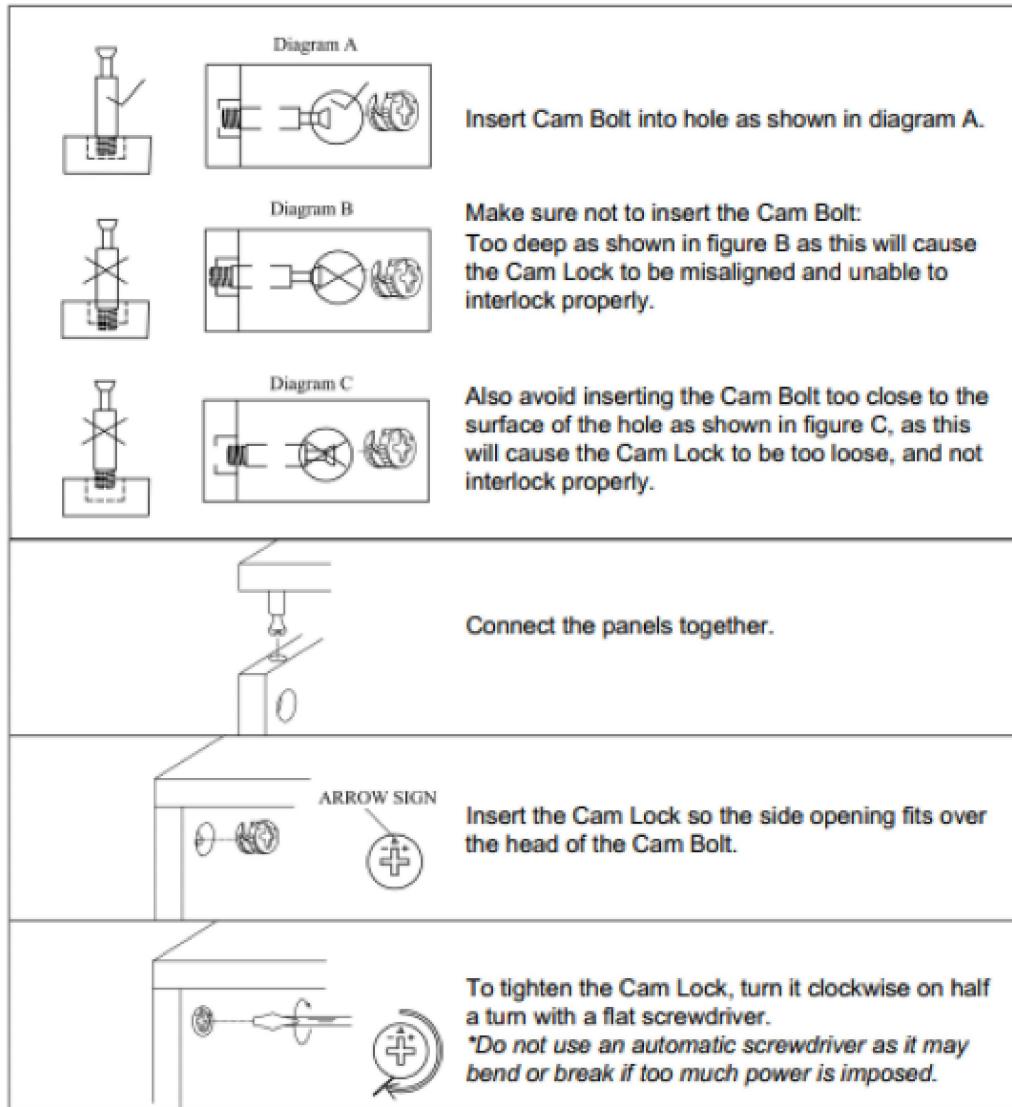


Detail View - CABINET



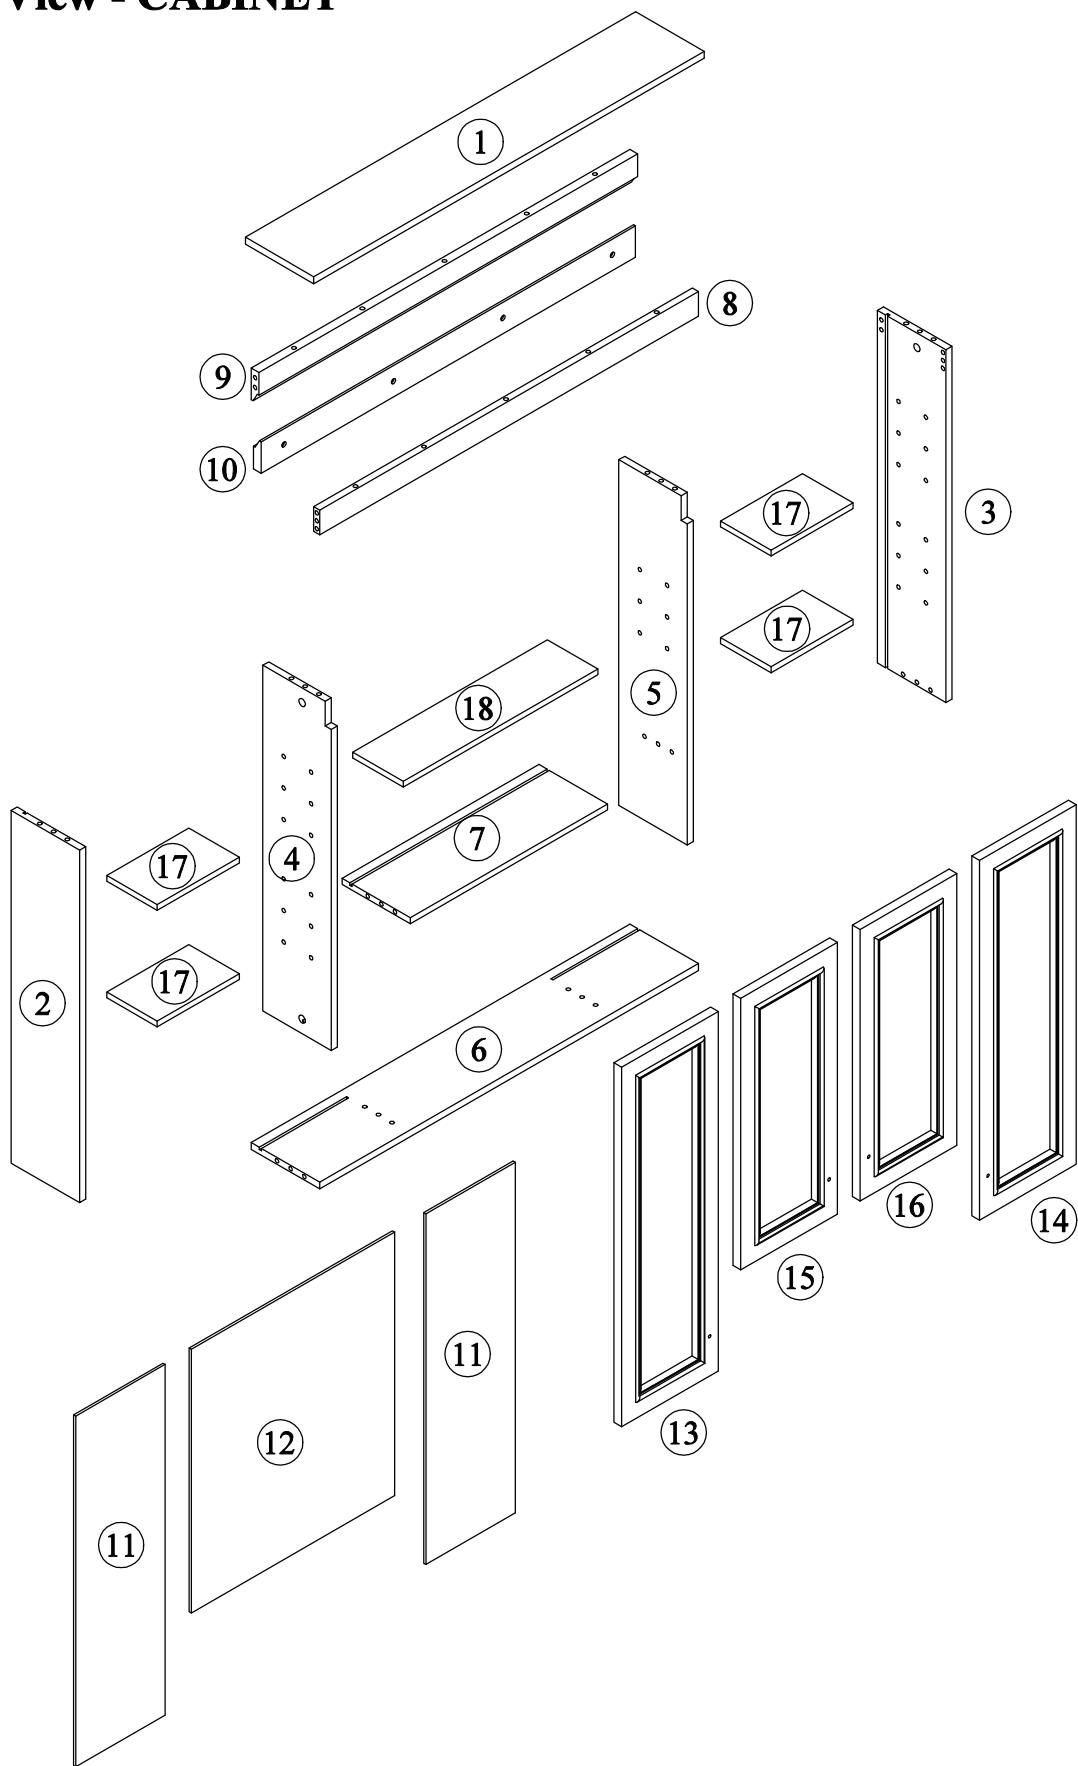


Identifying the Hardware-Identify the hardware using the illustrations below.

  
 
Part List - N710P358592

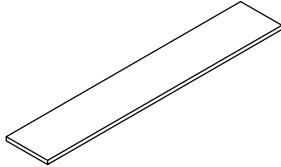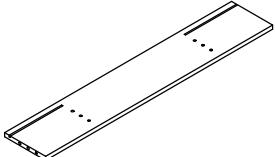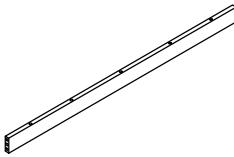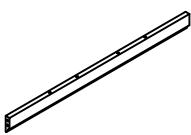1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	

  

Part List - N710P358592

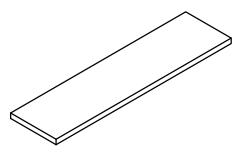15		16	
Door Cabinet (C) - 1pc		Door Cabinet (D) - 1pc	
17		18	
Adjustable Shelf (A) - 4pcs		Adjustable Shelf (B) - 1pc	

 
 
Hardware List - N710P358592

A	 ø6x35mm	B	 ø14.5x9mm	C	 ø10xø5x50mm
Three in one bolts (20pcs)		Three in one lock (20pcs)		Flat head screw (4pcs)	
D	 ø12x55mm	E		F	 ø5/32" x25mm
Plastic stopper (4pcs)		Handle (4pcs)		Handle screw (4pcs)	
G		H		I	 ø7xø3.5x15mm
Damping hinge (4pcs)		Damping hinge (4pcs)		Flat head screw (48pcs)	
J		K	 ø8x30mm	L	 ø7xø3.5x15mm
Laminate pad(20pcs)		Wood dowel (26pcs)		Round head screw(4pcs)	
M	 ø6x30mm				
Wood dowel (4pcs)					

STEP: 1

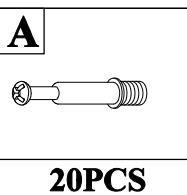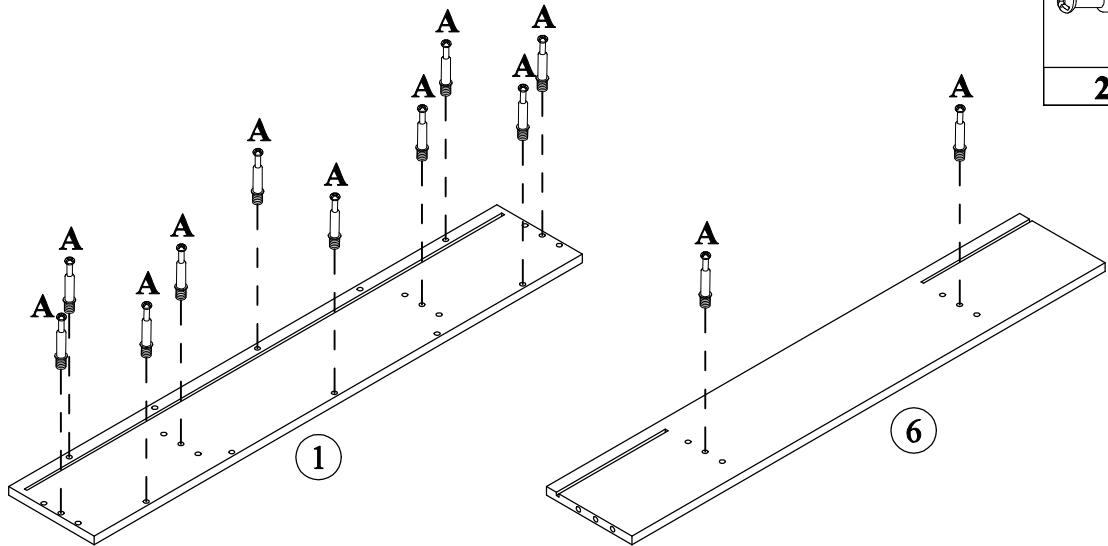


20PCS

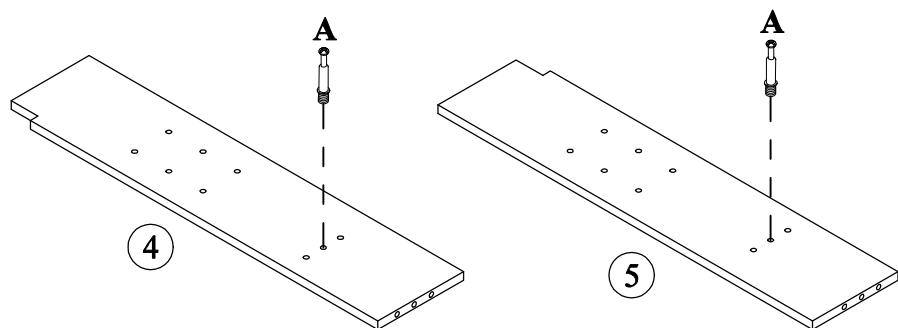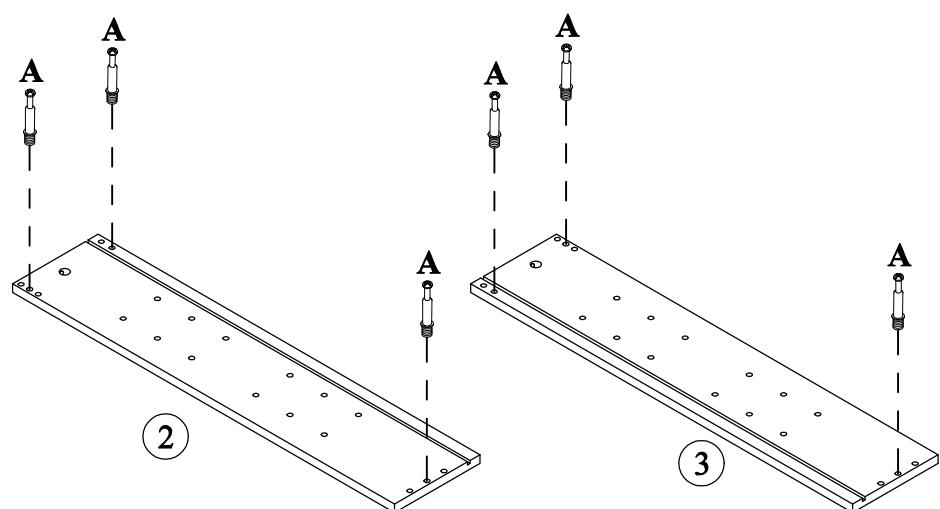


STEP: 2

B		M	
2PCS		4PCS	

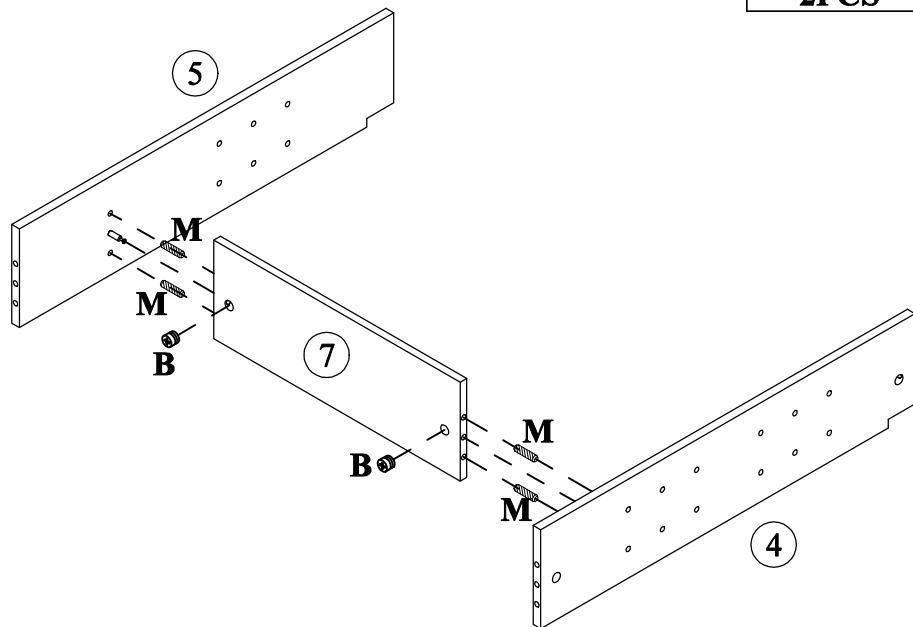


STEP: 3


B		K	
2PCS		4PCS	

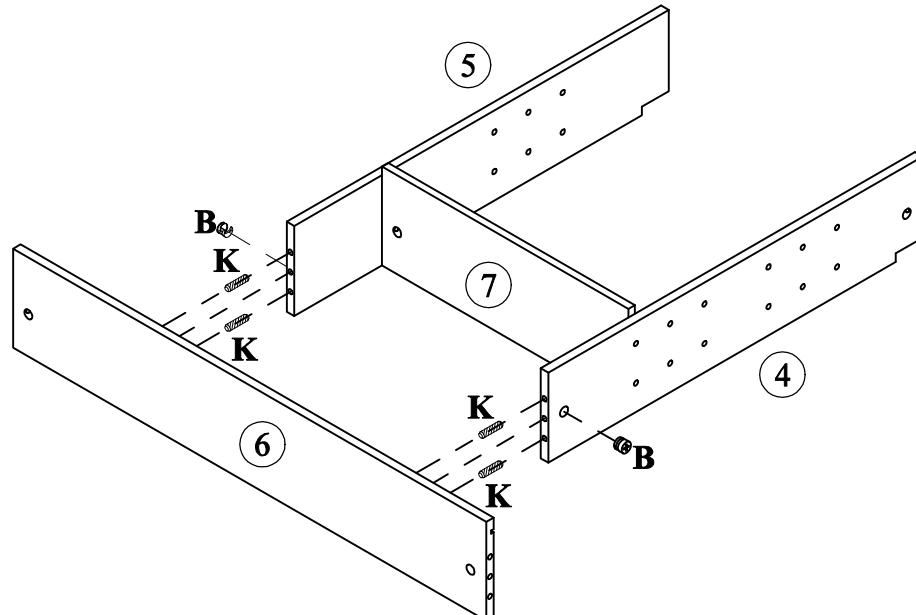


STEP: 4

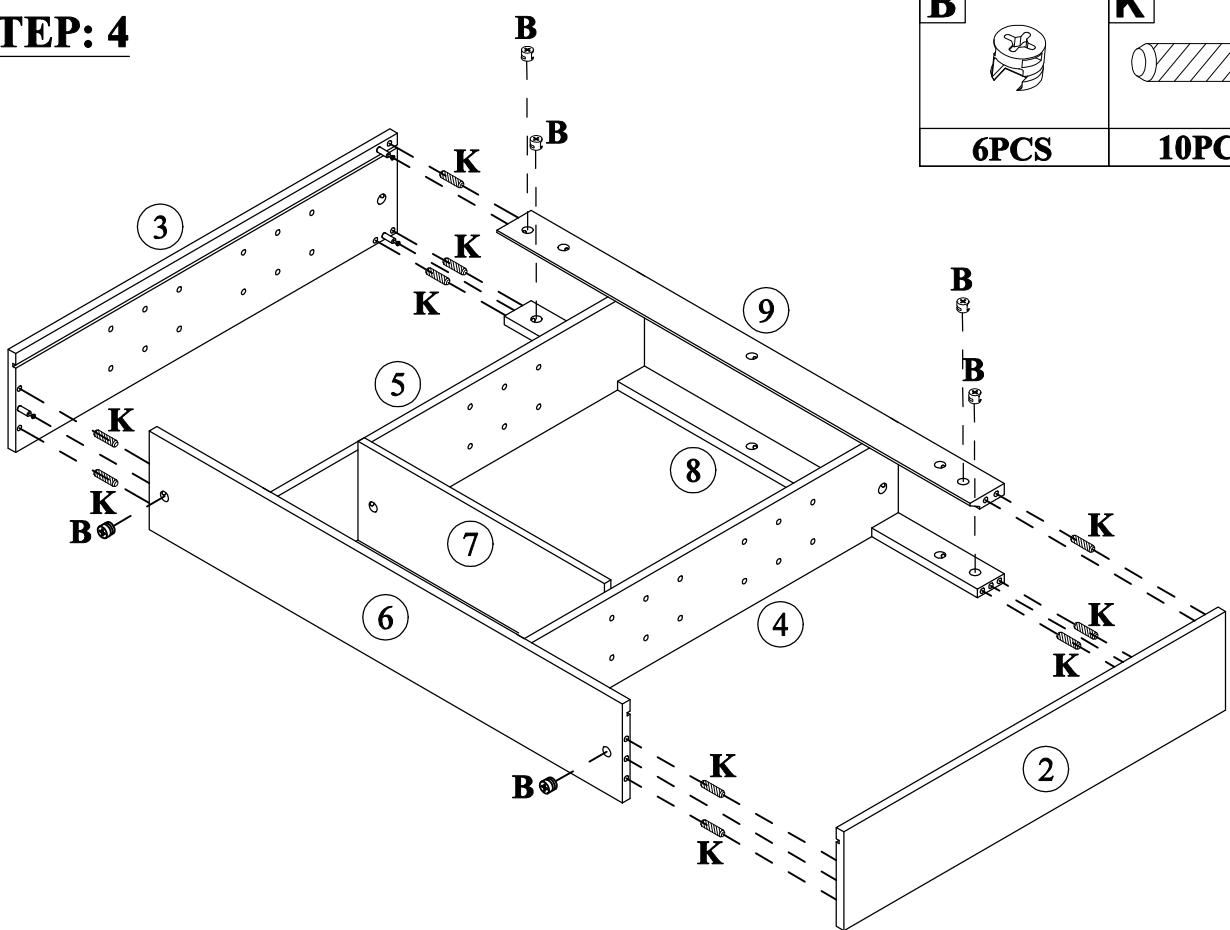


STEP: 5

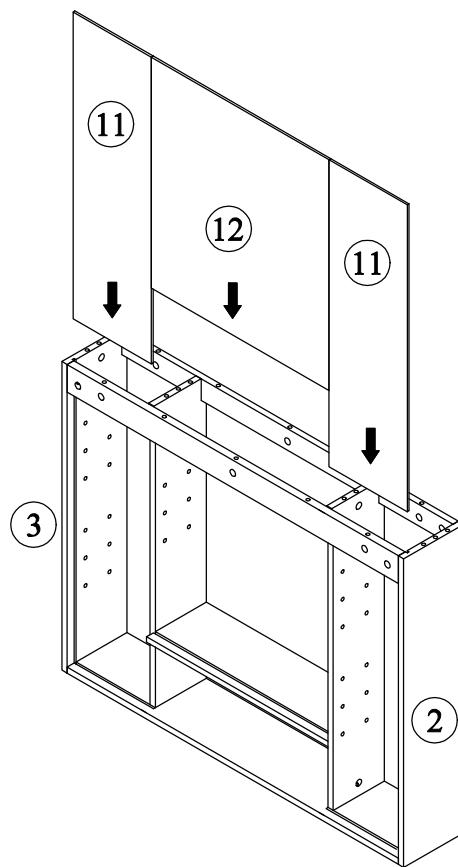

STEP: 6

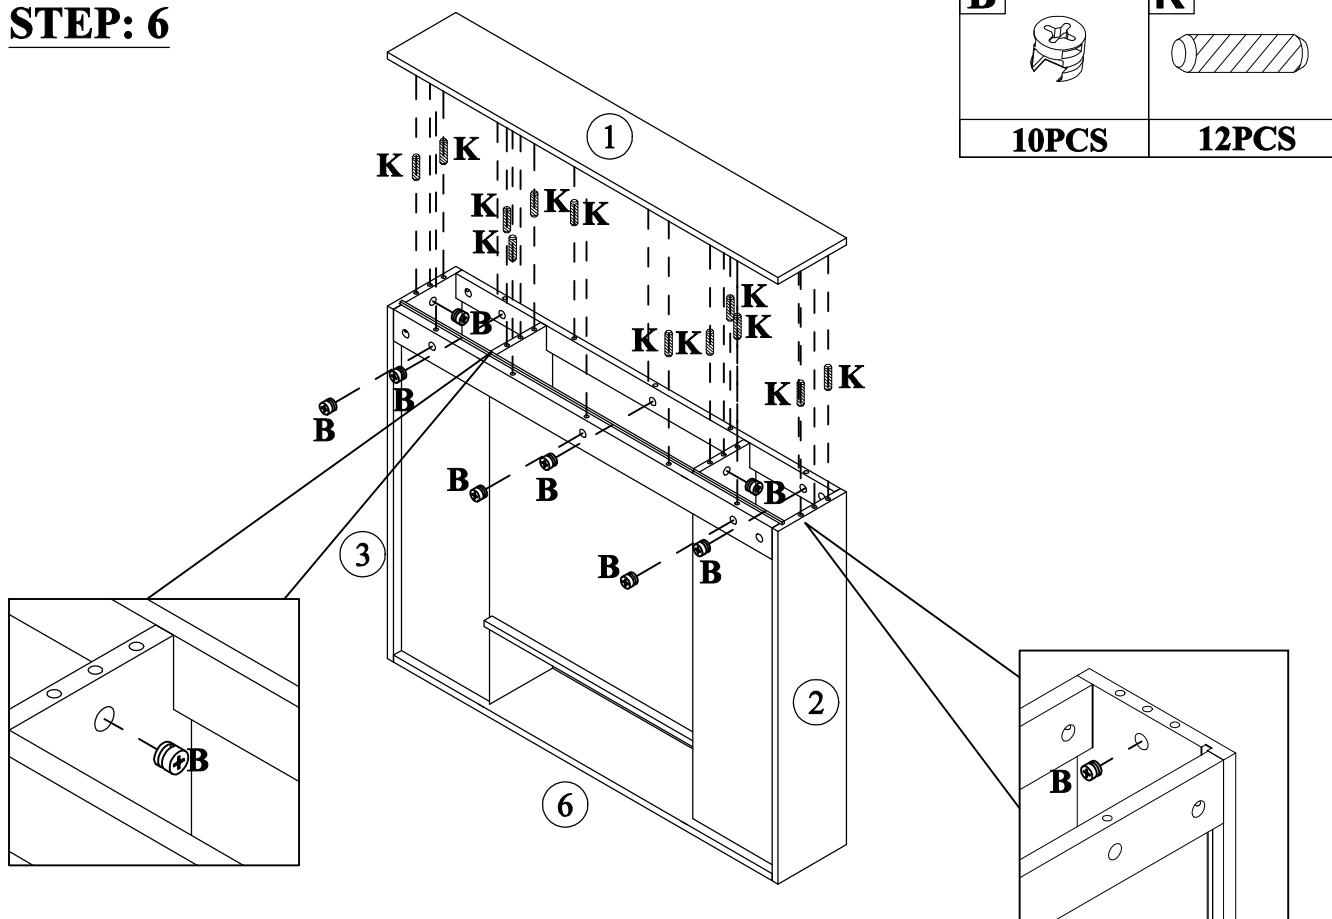


STEP: 7

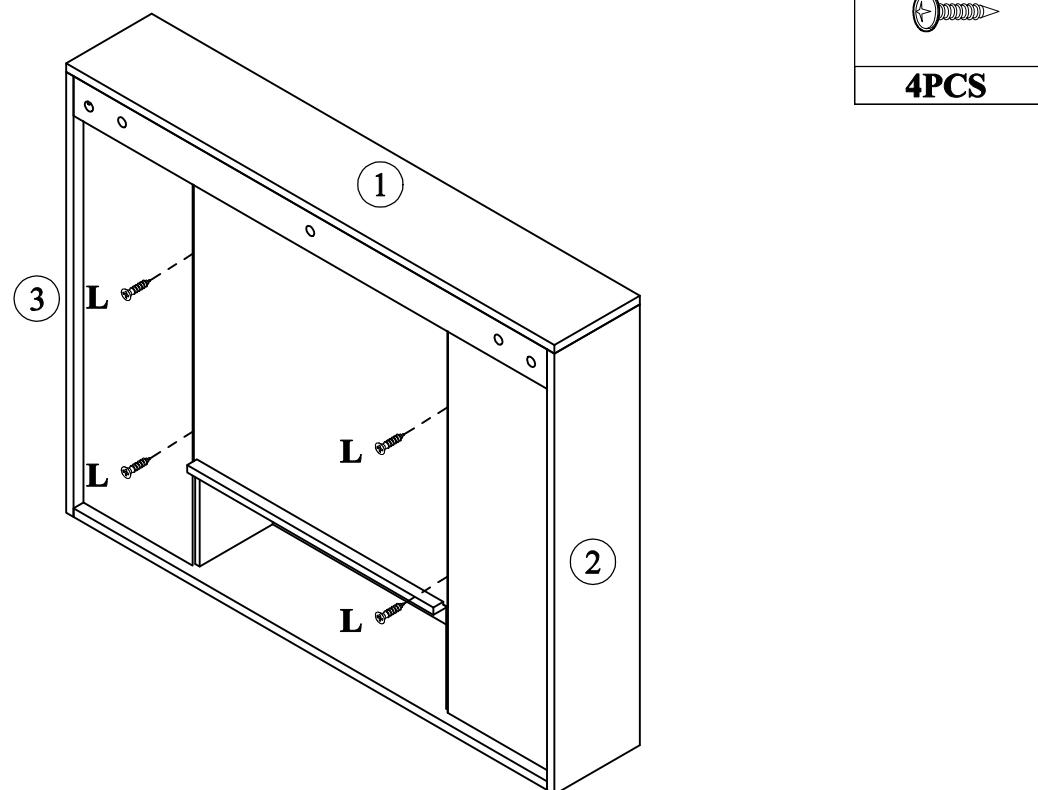



STEP: 8

H	I
4PCS	8PCS


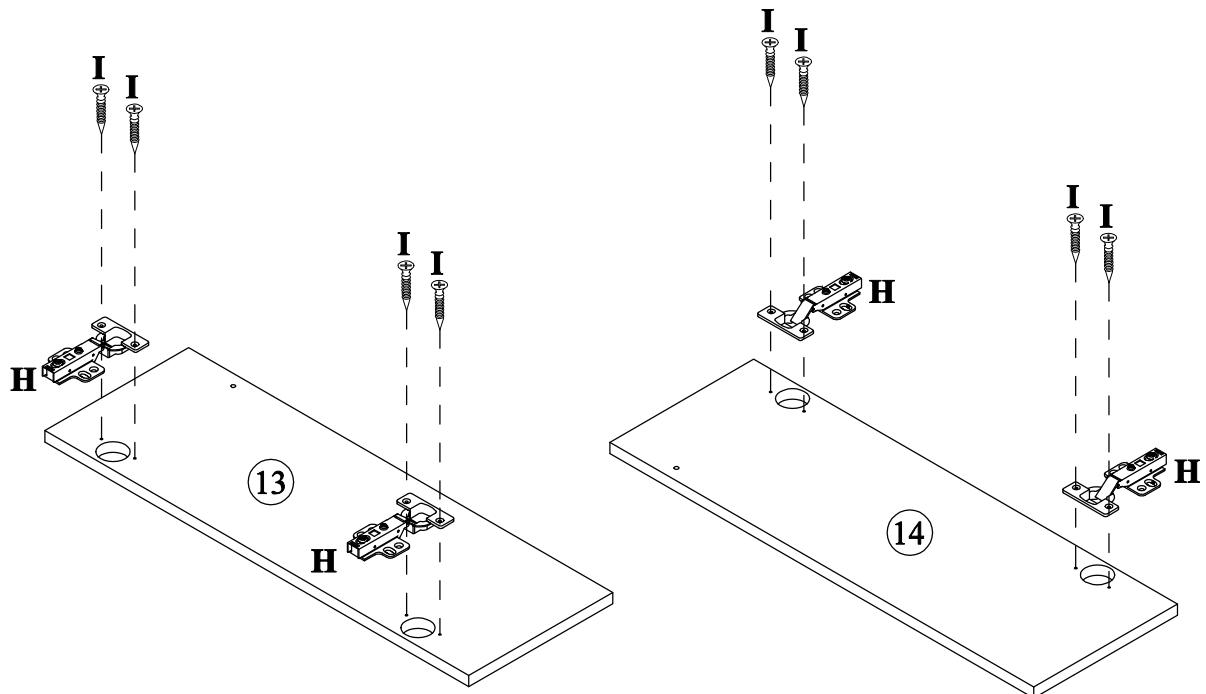


STEP: 9



E	F	I
2PCS	2PCS	16PCS

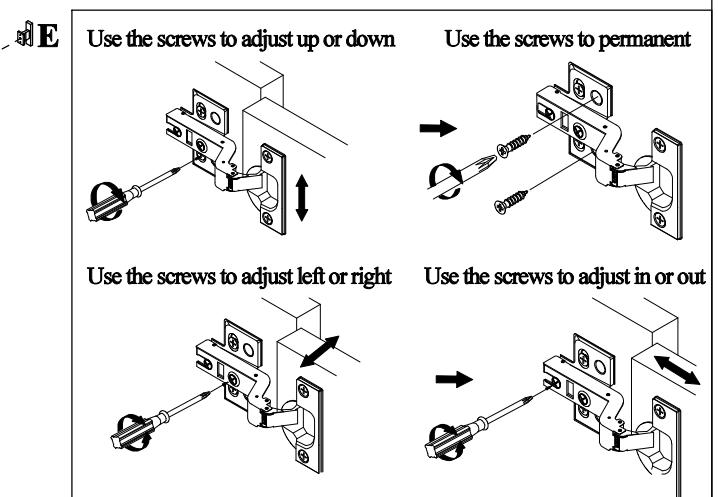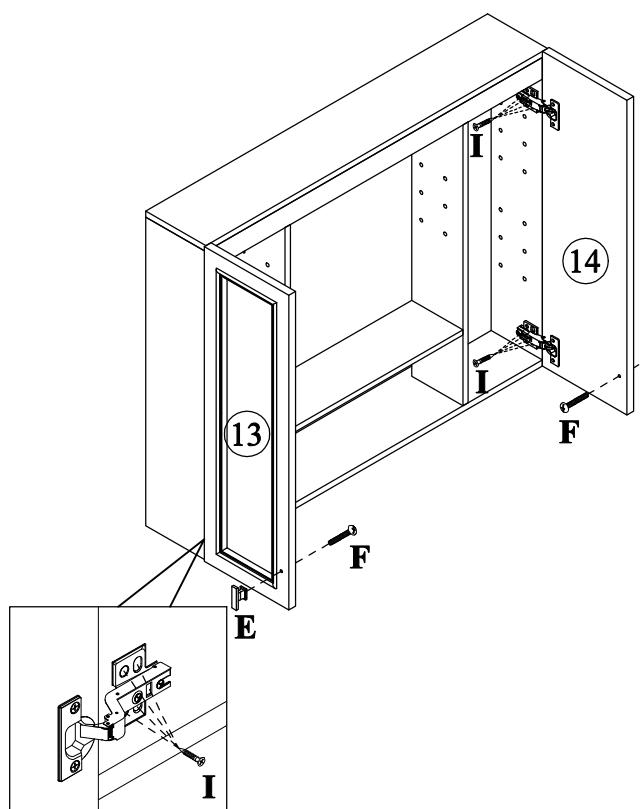


STEP: 10

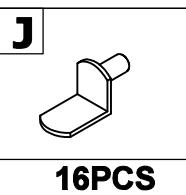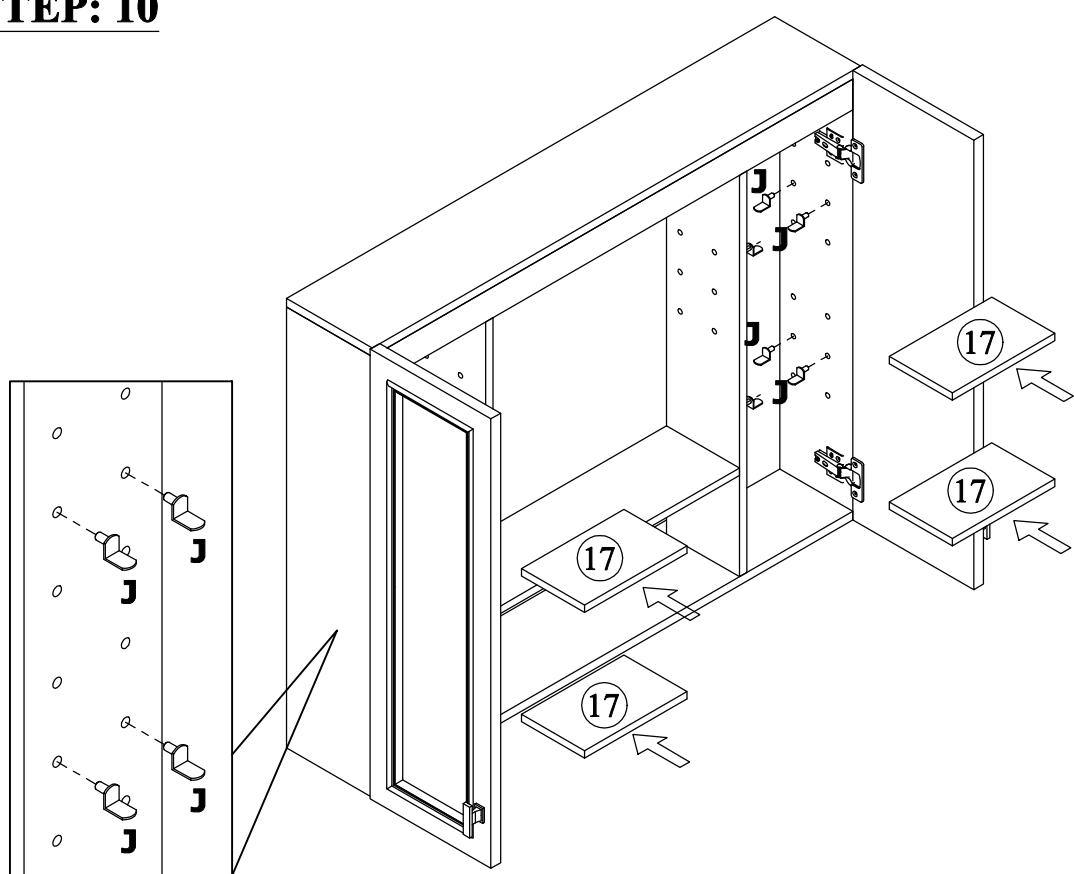

STEP: 11

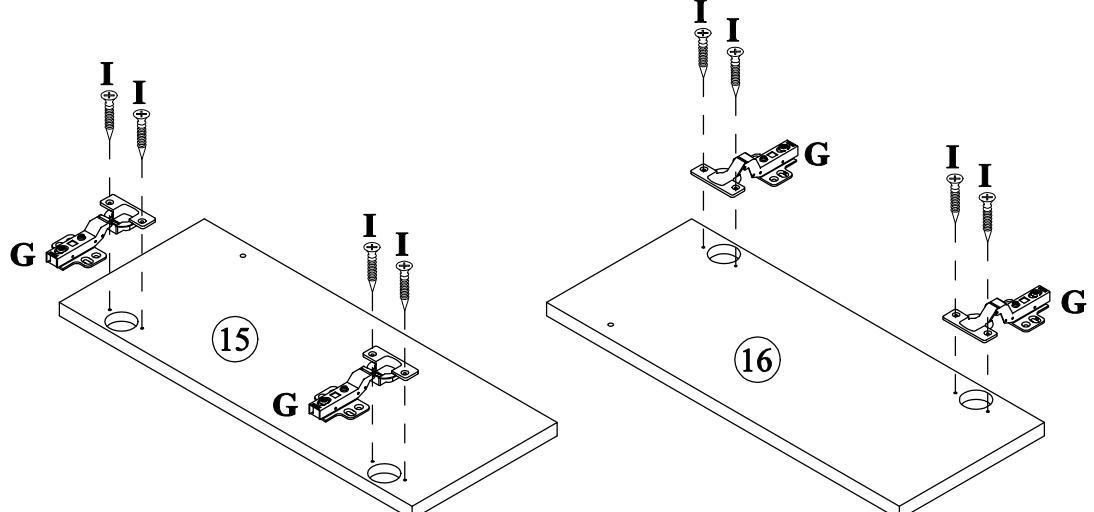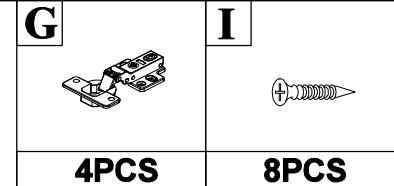


STEP: 12

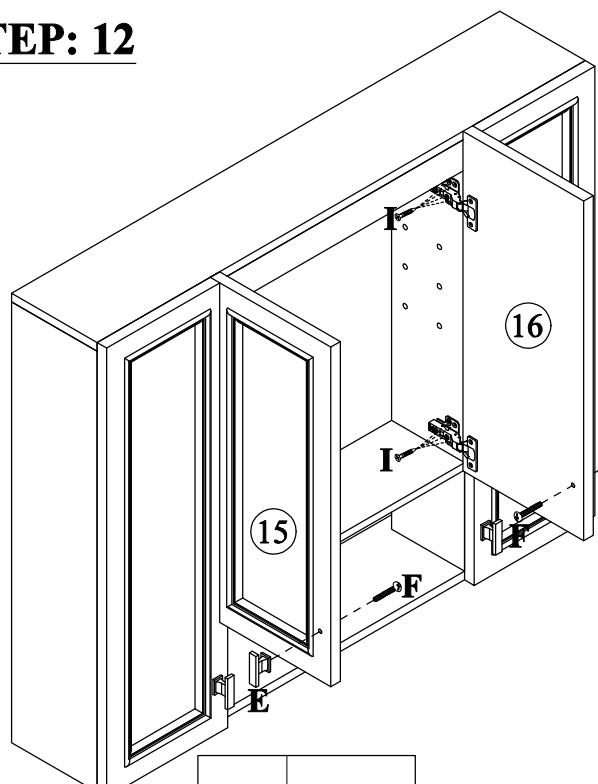


E	F	I
2PCS	2PCS	16PCS

E


Use the screws to adjust up or down

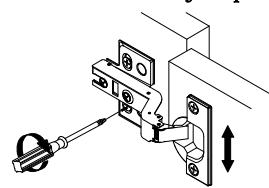


Use the screws to permanent

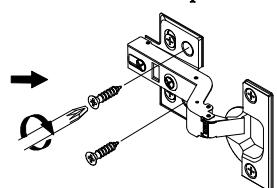


Use the screws to adjust left or right

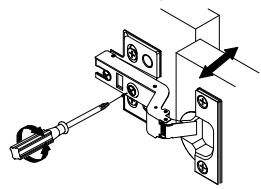

Use the screws to adjust in or out


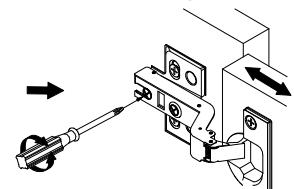


STEP: 13

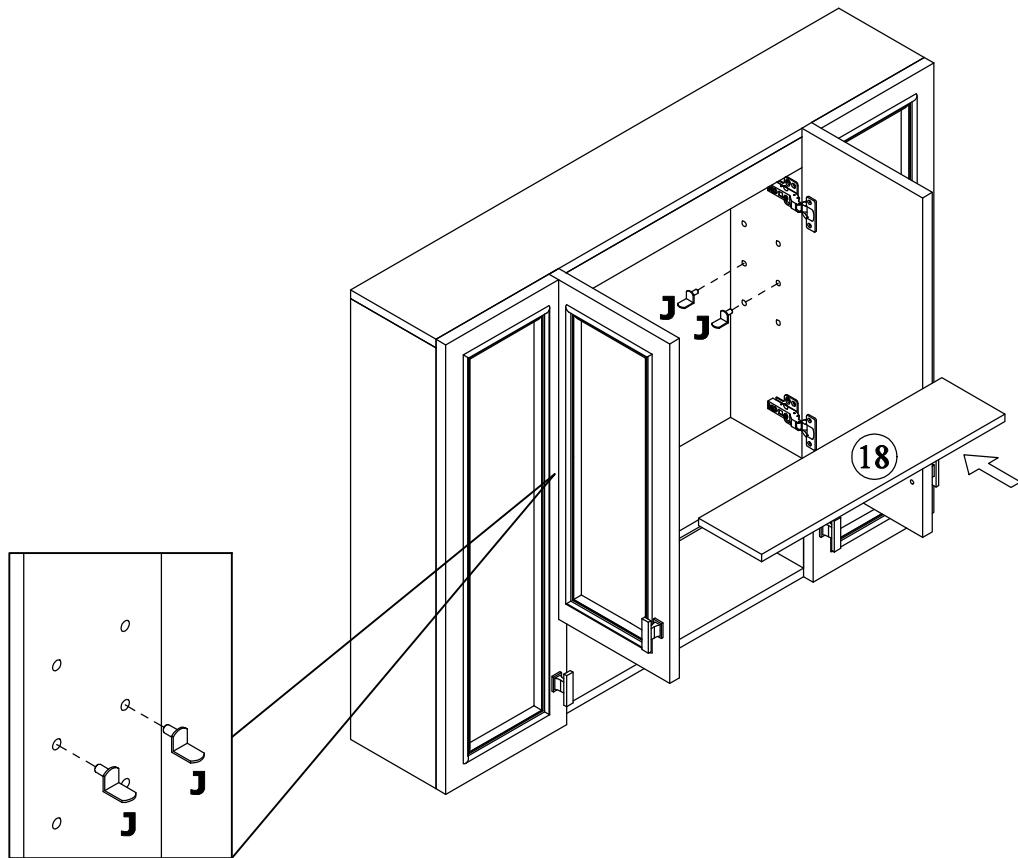

J
4PCS


STEP: 14

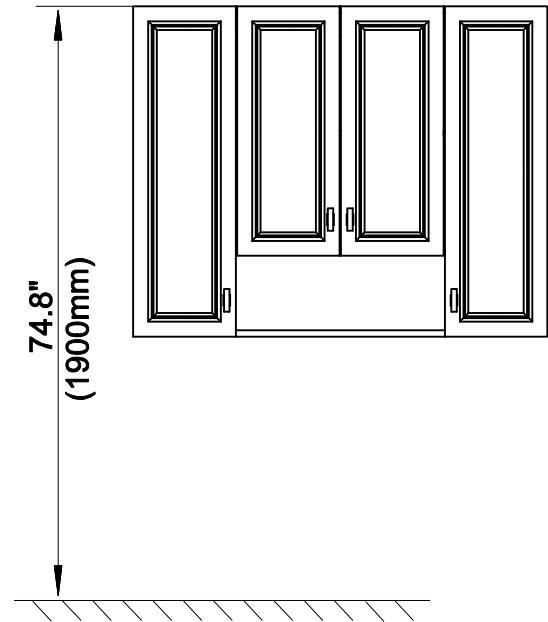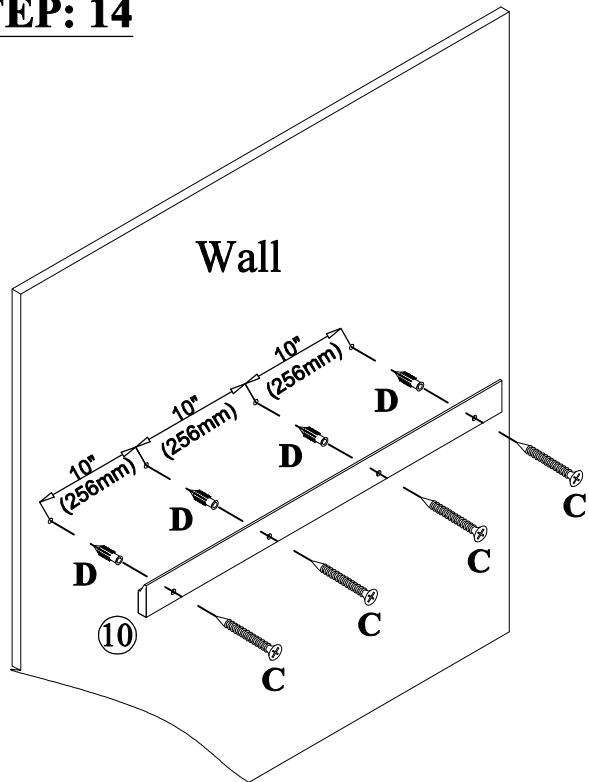



Draw the spacing between the walls and the No.10, punch holes in the wall, and fix the No.10 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".


STEP: 15

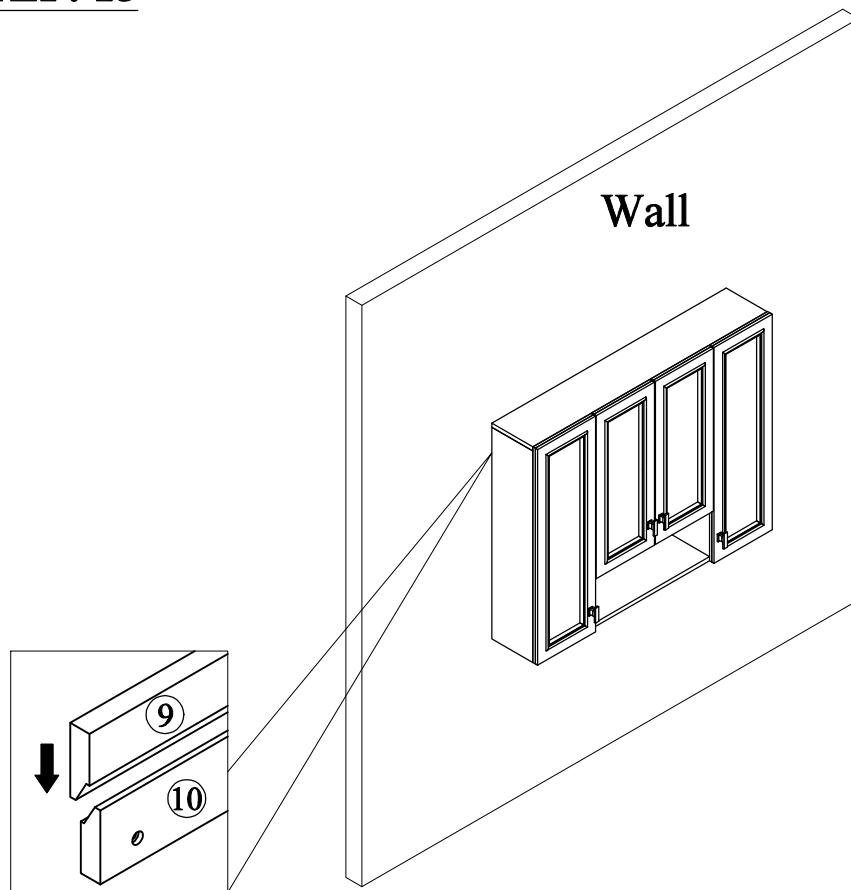

STEP: 16

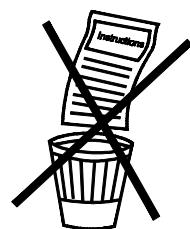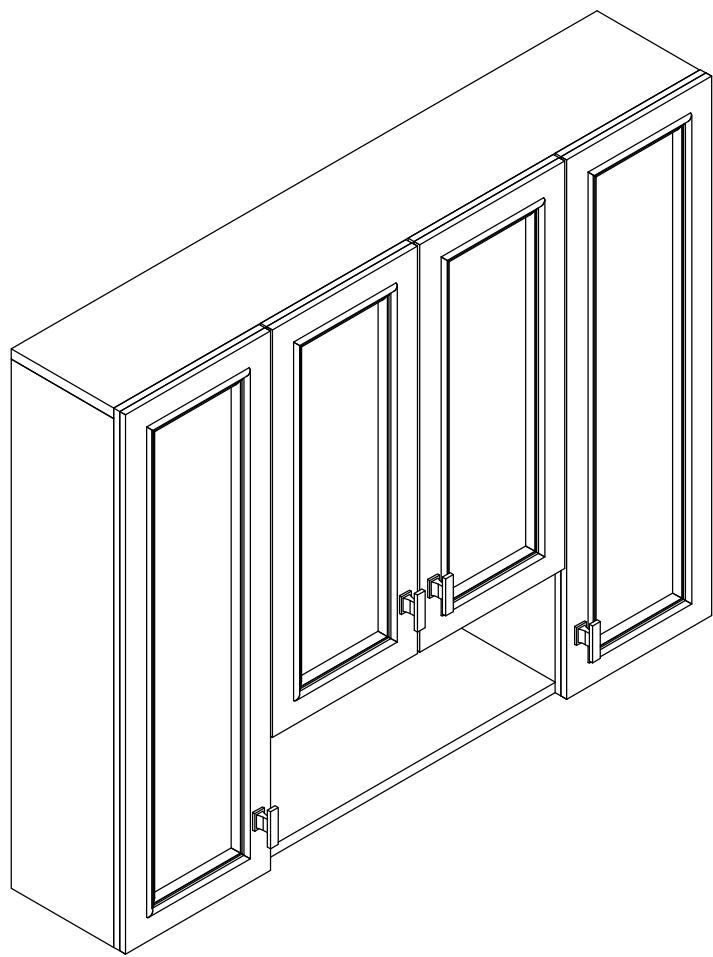


HINGE ADJUSTMENTS

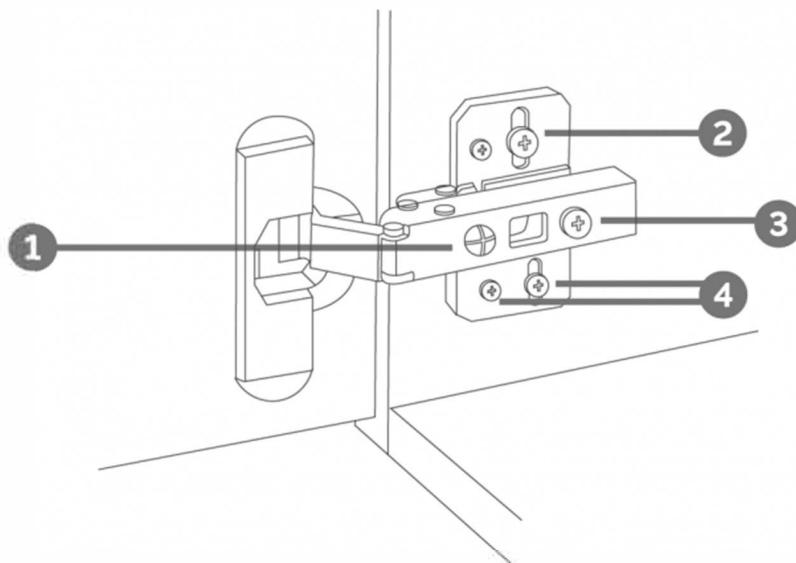


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

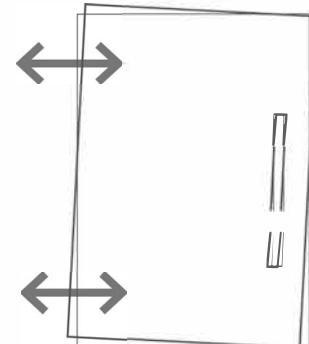

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

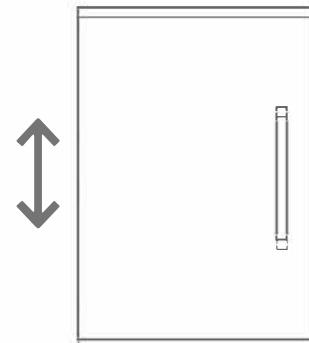

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

